


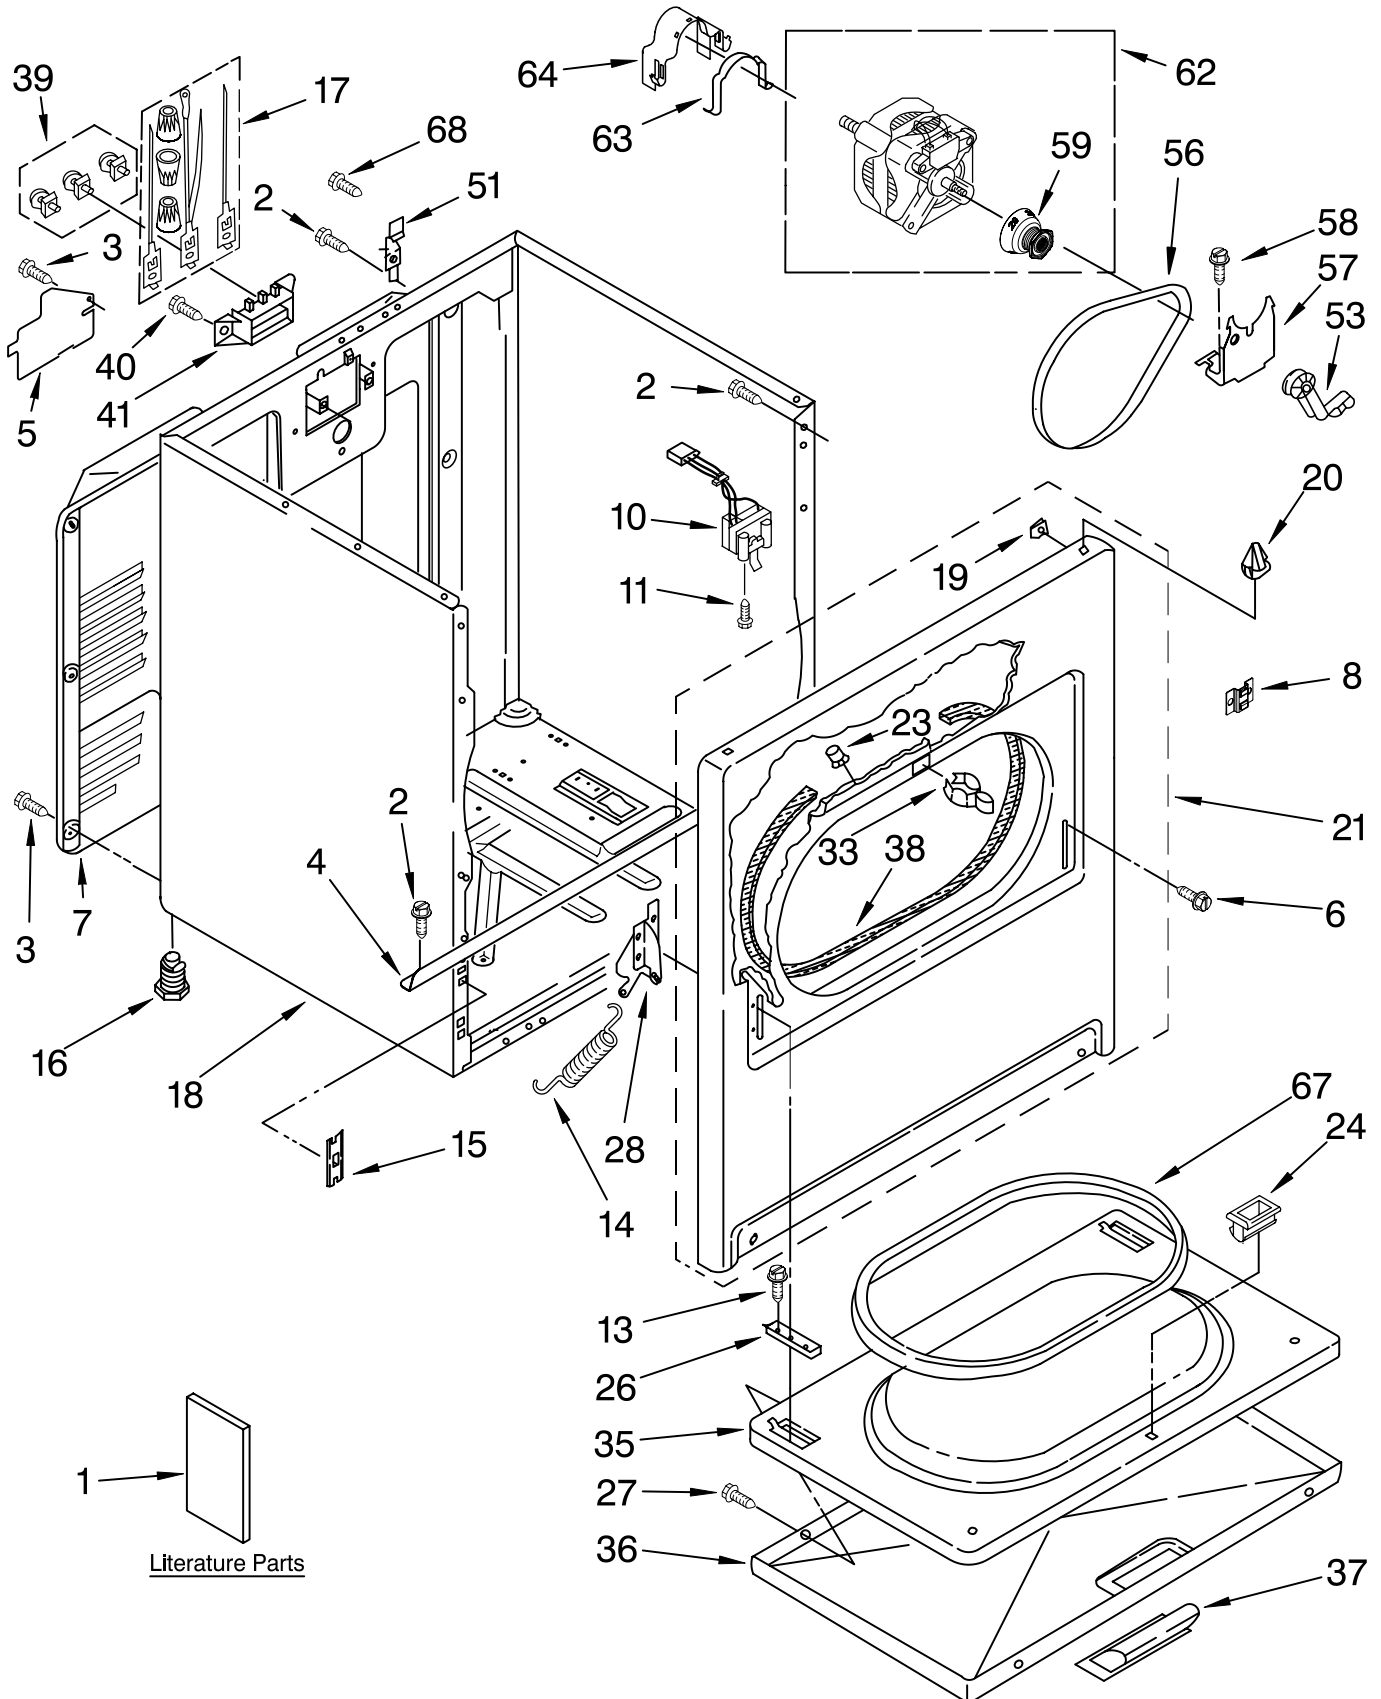

# CABINET PARTS

For Model: WED5500SQ0, WED5500ST0  
(White) (Biscuit)

29" ELECTRIC DRYER



FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# CABINET PARTS

For Model: WED5500SQ0, WED5500ST0


(White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8577188	Literature Parts Installation Instructions	16	3392100	Foot, Dryer	37		Handle, Door
	W10042960	Sheet, Cycle Feature		279810	Foot – Optional (Extended Length Package Of 2) (Not Included)		8566057	White
	8578183	Use & Care Guide	17	279318	Terminal, Tinned & Brass (3) (Includes Illus. 39)		8566069	Biscuit
	8528190	Wiring Diagram				38	3406129	Seal & Bearing Assembly
<b>Following May Be Purchased</b>						39	279393	Terminal Block Kit (For Terminal Block)
<b>DO-IT-YOURSELF REPAIR MANUALS</b>			18		Cabinet	40	3393008	Screw, 10–16 x 1/2
	677818	Dryer		8530603	White	41	3397659	Block, Terminal
2	343641	Screw, 10–16 x 1/2		8530606	Biscuit (Includes Illus. 4)	51	8066217	Hinge, Top (2)
3	693995	Screw, Hex Washer Head	19	98234	Clip, Ground	53	691366	Idler & Pulley Assembly
4	8541400	Bracket, Cabinet	20	690363	Lock, Front Top (2)	56	8066065	Belt, Drive
5	3396795	Cover, Terminal Block	21		Panel, Front	57	348780	Base, Motor
6	342043	Screw, 10–32 x 3/8		695620	White	58	3400500	Bolt, 5/16–18 x 3/4
7	3396805	Panel, Rear		3977244	Biscuit	59	8066184	Pulley, 60 Hz.
8	8546676	Clip, Door Spring	23	685203	Clip, Felt Pad (3)	62	8066206	Motor Assembly 60 Hz.
10	3406107	Door Switch Assembly	24	3389441	Catch, Door Assembly	63	660658	Clamp, Motor
11	697773	Screw, 6–20 x 7/8	26	337189	Clip, Hinge (2)	64	3404162	Clamp, Motor (W/Shield)
13	3357011	Screw, 10–16 x 1/2	27	694091	Screw, 8–18 x 3/8	67	3390731	Seal, Door
14	8541401	Spring, Door (2)	28	8066056	Hinge, R.H.	68	697776	Screw, 10–32 x 5/8 (External Ground)
15	3394083	Clip, Front Panel (2)		8066057	Hinge, L.H.			
			33	696144	Strike, Door			
			35	695737	Door, Rear			
			36		Door, Front			
				3393549	White			
				3977241	Biscuit			

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP AND CONSOLE PARTS

For Model: WED5500SQ0, WED5500ST0  
(White) (Biscuit)

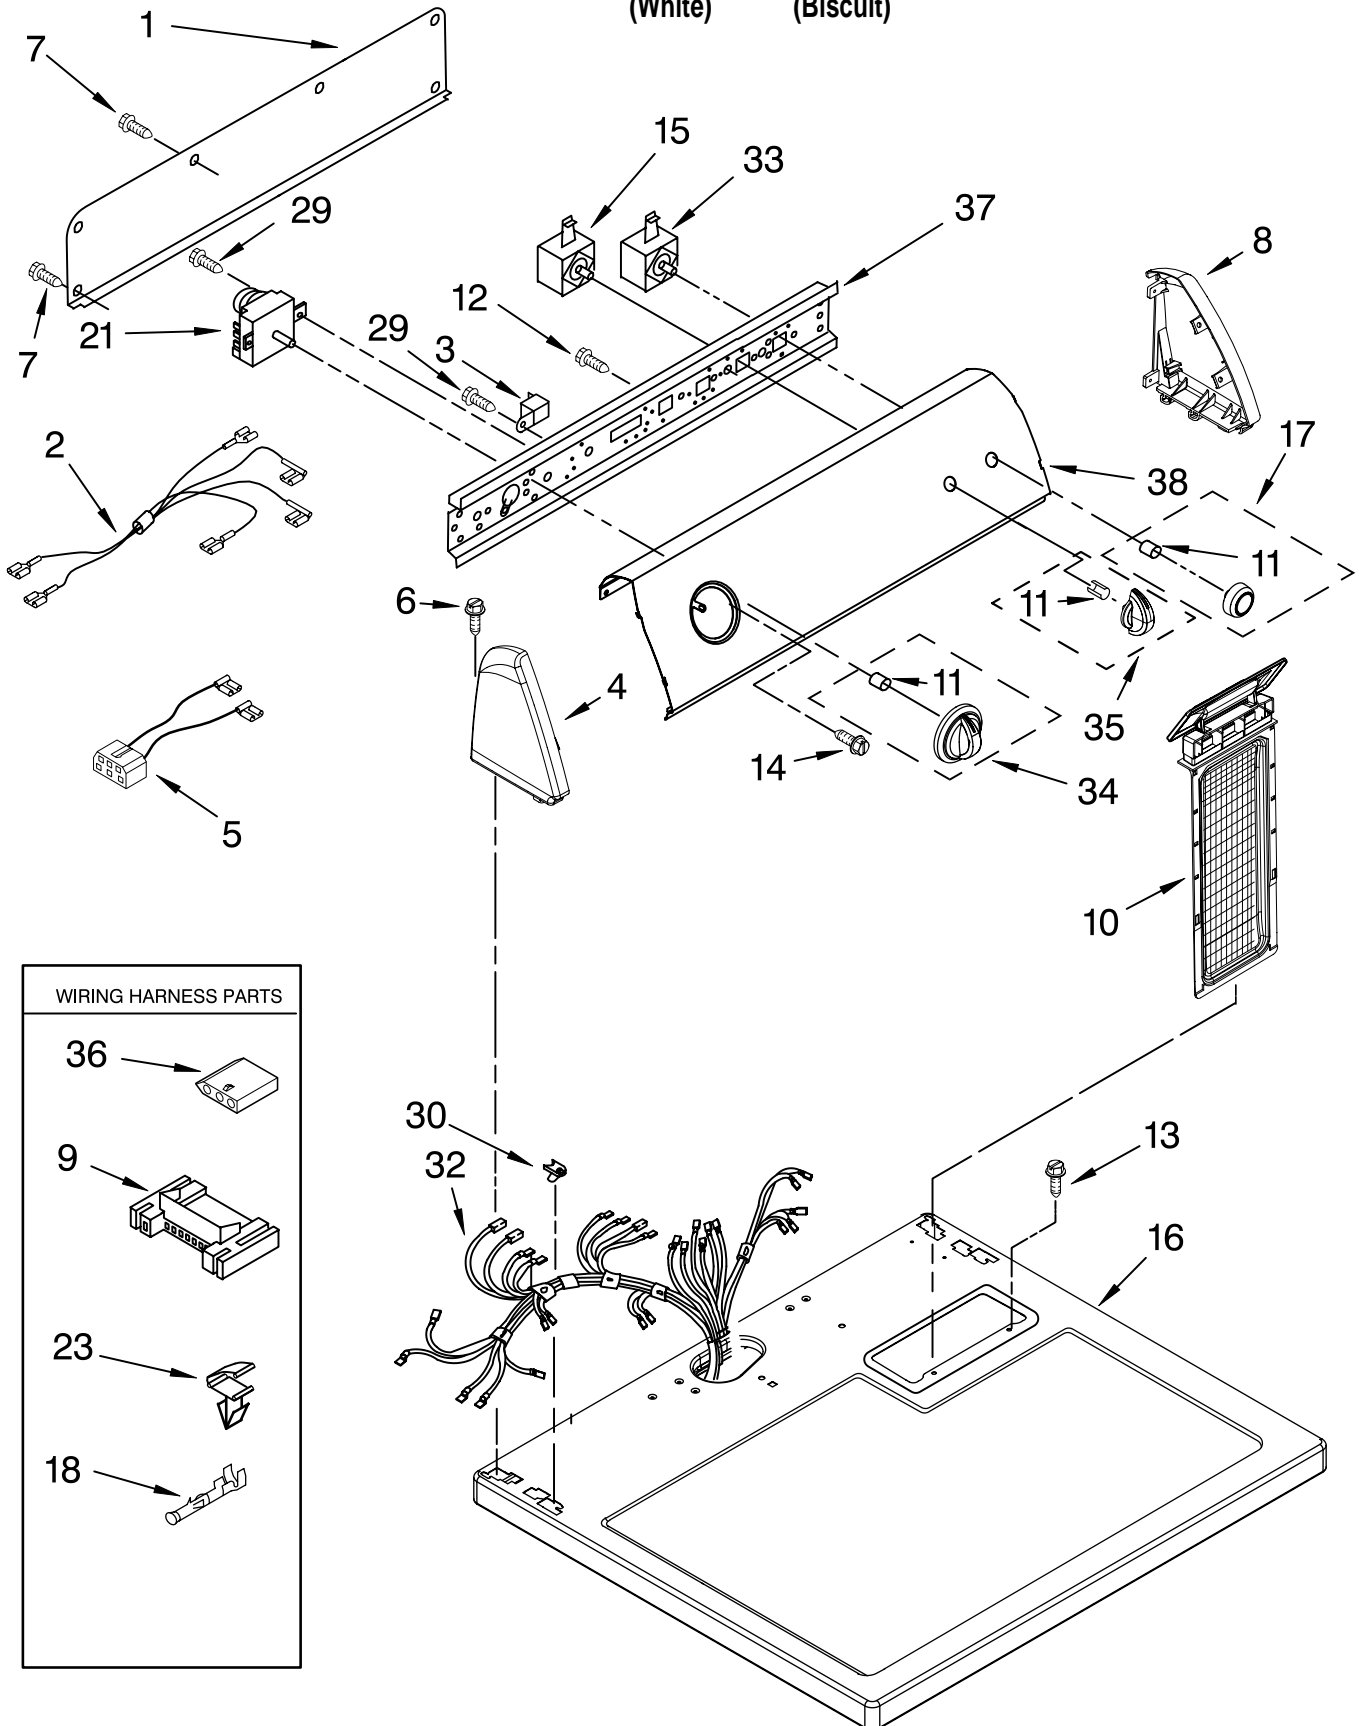

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP AND CONSOLE PARTS

For Model: WED5500SQ0, WED5500ST0

(White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	8274261	Panel, Rear Console	11	8536939	Clip, Spring	30	357213	Nut, Push-In (2)
2	3401684	Wire, Jumper (PTS to Buzzer)	12	8533971	Screw, 8-18 x 5/16	32	8299873	Harness, Wiring
3	694419	Buzzer	13	688983	Screw, 8-18 x 5/8	33	3398095	Switch, Push-To-Start
4		Cap, End (L.H.)	14	8533951	Screw, Grounding	34		Timer Knob Assembly
	8271365	White	15	3399639	Switch, Rotary			
	8271368	Biscuit	16		Top		8566061	White
5	8539893	Jumper, Temperature Switch		8557930	White		8566064	Biscuit
6	388326	Screw, Console		8557931	Biscuit	35		Knob, Control
7	693995	Screw, Hex Head	17		Knob, Push-To-Start		8565944	White
8		Cap, End (R.H.)		8566073	White		8565947	Biscuit
	8271359	White		8566076	Biscuit	36	3936144	Connector
	8271362	Biscuit	18	94614	Terminal	37	8544895	Bracket, Control
9	3395683	Housing, Connector (Motor)	21	3979617	Timer, 60 Hz.	38		Panel, Control
10		Screen, Lint	23	3394427	Clip, Harness		8578846	White
	8557857	White	29	8533971	Screw, 8-18 x 5/16		8578847	Biscuit
	8557858	Biscuit						


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# BULKHEAD PARTS

For Model: WED5500SQ0, WED5500ST0

(White)

(Biscuit)

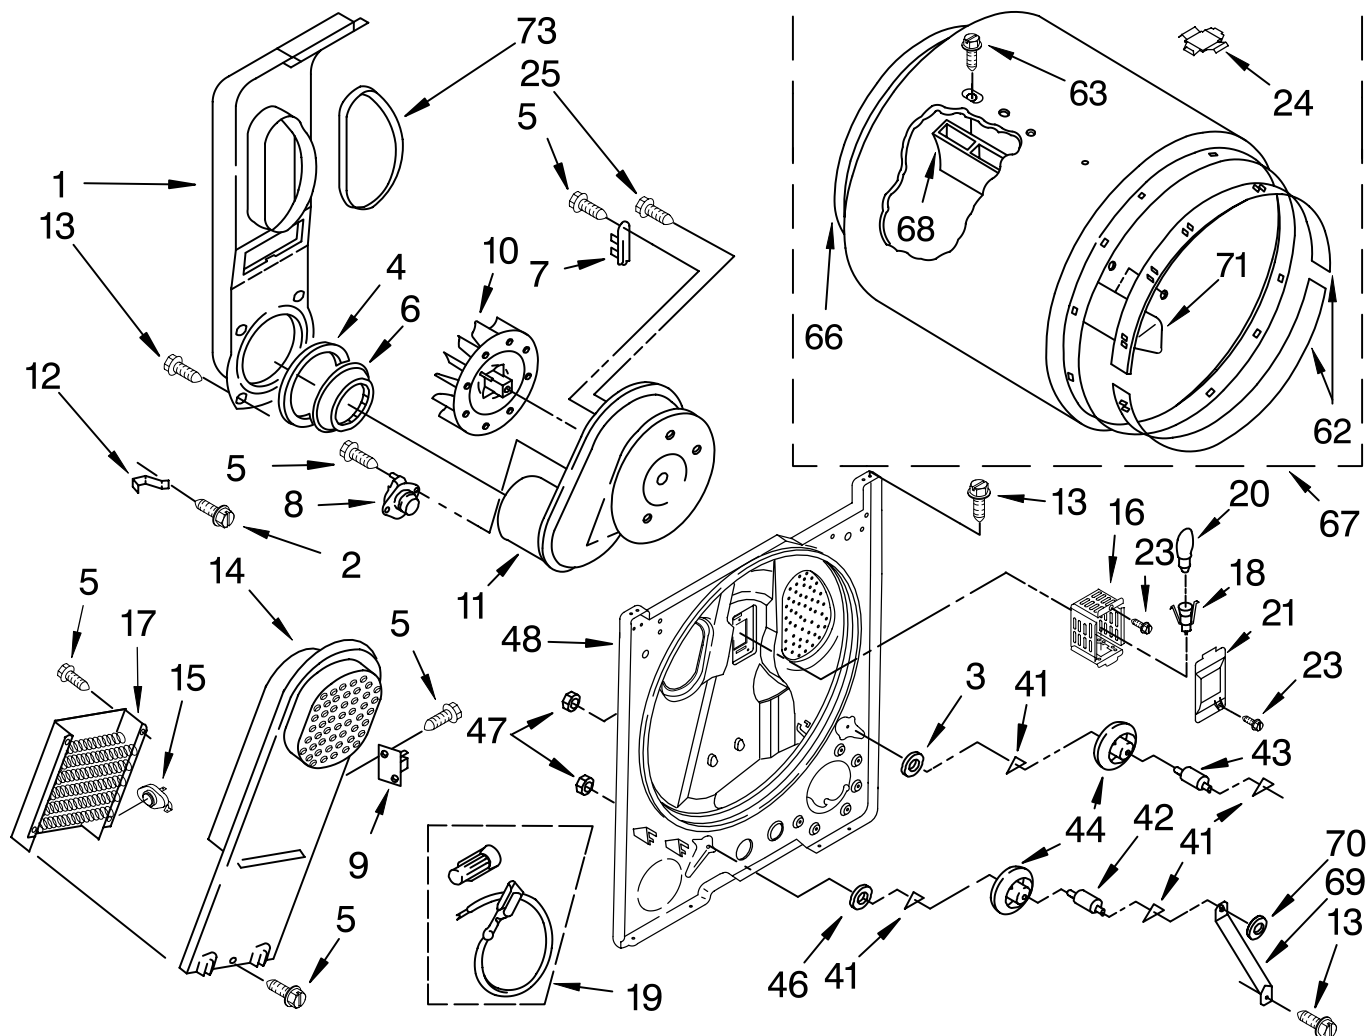

Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly
2	489463	Screw, 8-18 x 5/8
3	3388703	Washer-Support
4	347139	Seal, Lint Chute
5	90767	Screw, 8-18 x 3/8
6	696302	Shield, Exhaust
7	3392519	Thermal Fuse
8	3387134	Thermostat, Internal-Bias
9	3977393	Thermal Cut-Off (Includes Illus. 15)
10	694089	Wheel, Blower (Includes Illus. 22)
11	8577230	Housing, Blower
12	8066155	Clip
13	343641	Screw, 10-16 x 1/2

Illus. No.	Part No.	DESCRIPTION
14	8541818	Box, Heater
15	3977767	Thermostat, 221°F (105°C)
16	3977373	Bracket, Drum Light
17	8565582	Element, Heater
18	3403634	Socket Assembly
19	279457	Wire Kit, Terminal (For Heater Element Wiring Harness Repair)
20	3406124	Bulb, Light
21	3402841	Lens, Drum Light
23	487909	Screw, 8-15 x 1/2
24	8066086	Drum Hole Plug

Illus. No.	Part No.	DESCRIPTION
25	3390647	Screw, 8-18 x 1/2
41	690997	Ring, Tri
42	3399506	Shaft, L.H.
43	3399507	Shaft, R.H.
44	3397590	Roller, Support
46	348197	Washer, Support
47	3359452	Nut, 3/8-16
48	3403493	Bulkhead
62	692526	Ring, Bearing
63	97787	Screw, 11-16 x 3/4
66	3406130	Seal, Rear Drum
67	695587	Drum Assembly
68	692490	Baffle, Drum (2)
69	3976434	Bracket, Support
70	90296	Clip
71	3403636	Baffle, Drum (1)
73	339956	Seal

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

## OPTIONAL PARTS (NOT INCLUDED)

For Model: WED5500SQ0, WED5500ST0  
(White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------

### ACCESSORY PARTS

279948	Kit, Dryer Repair
8522199	Kit, Dryer Vent Testing
3404351	Dry Rack

### PAINT, TOUCH-UP (1/2oz.)

72017	White
4392899	Biscuit

### PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
350938	Primer, Gray

### PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit (Uncut)